

MF Inline 1P 15mm

Pressure independent flow controller

Manual



MF Inline 1P 15mm

Optimal flow control

The MF Inline creates a constant flow through its unique property of pressure independence. As such it ensures savings, optimal user comfort and system stabilisation. Installed into the piping towards both inlets of mixer taps, the product significantly reduces temperature fluctuations.

MF Inline 1P 15mm

Pressure independent flow controller

Read this manual carefully.

Packaging contents (in case of individual packaging)

- 1 x MF Inline 1P 15mm - for installation with compression fitting: G 1/2" x 15mm
- 2 x Compression ring (also: 'ferrule' or 'olive')
- 2 x Compression nut

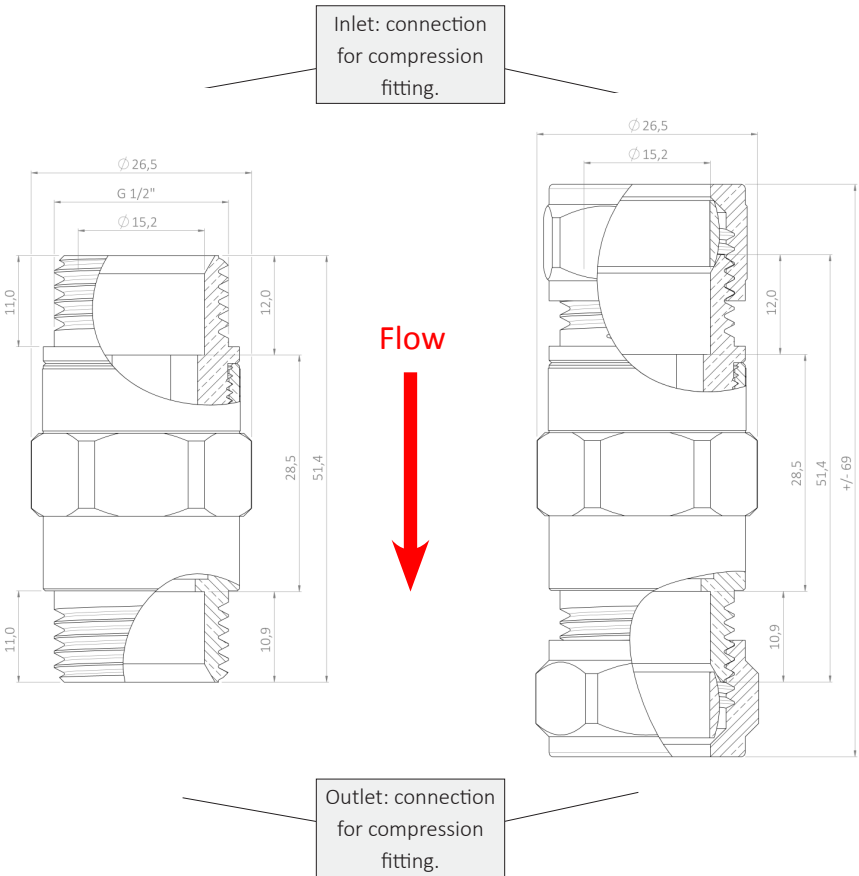


Image: MF Inline 1P 15mm
(dimensions in mm)

Image: MF Inline 1P 15mm with
compression fittings (dimensions in mm)

MF Inline 1P 15mm

Pressure independent flow controller

Installation

Install the product into the piping of a water installation.

1. Shut off the system water pressure and make sure there is no dirt in the piping.
2. Install the product with supplied compression fittings.
3. Ensure that each compression fitting is tightened to 20 Nm torque.
4. Re-open the system water pressure.
5. Check that the product is properly tightened and a watertight seal is achieved. If necessary, repeat the above steps.



Do not use wrenches or other grabbing tools on the product itself unless this is necessary. If necessary, only use tools on the hexagonal part of the product. Do not use excessive force to install the product.



Compression fittings are designed for one-time assembly. Once assembled, they must be replaced if re-installation is required.



If present, remove any existing flow limiters upstream and downstream of the product in order to guarantee the optimal performance of the product.

Maintenance and cleaning

The product is maintenance-free with the exception of the following:

Possible residue that originates from the water system and that exceeds the maximum particle size for the product (see product Data Sheet) will collect on the meshes inside of the product. This needs to be removed by removing the entire product from the piping. Hold the product upside down, submerge in clean water and shake until dirt falls out. Rinse with clean water prior to re-installation. Keep the product clean for optimal functionality.

Lime residue

In exceptional circumstances, some lime may collect on the inside of the product. This is however very rare because (1) the product is permanently submerged in water, (2) the used materials are not expected to collect lime and (3) the flow speed in the product is very high. In the unlikely case that there is some lime residue, this can best be cleaned out with a mild lime descaler.



After maintenance / cleaning, always use new compression fittings that meet the original specifications.



DO NOT in any way disassemble the product under any circumstance and do not replace parts with parts of other manufacturers. Disassembly of the product leads to product damage, loss of functionality and irrevocable loss of warranty.

Careful use of Marine Flow products

Marine Flow products must only be used for their intended purpose and under the appropriate circumstances. To this end, the following must be observed.

1. The products are used with care. In this context, careful use means:
 - a. The product is only used for the application for which it is intended;
 - b. The product is installed and treated with care;
 - c. The product is maintained and cleaned when necessary;
 - d. The product is only used under conditions that (drinking) water installations must legally comply with;
 - e. The product is used according to the instructions in this manual and according to the product specifications and criteria as set out in the product Data Sheet.

MF Inline 1P 15mm

Pressure independent flow controller



Careful use of Marine Flow products - continued

2. The products are not exposed for a prolonged period, that is to say within a permanent or semi-permanent installation setting, to a water pressure of 500 kPa (dyn or more in combination with a temperature of 60 °C or more. This does not include brief and incidental higher pressures and higher temperatures within the product's allowed operating conditions.

For (desired) application within a permanent or semi-permanent installation setting with a water pressure of 500 kPa (dyn) or more in combination with a temperature of 60 °C or more, please contact Marine Flow at info@marine-flow.com

Disclaimer: Marine Flow aim to provide correct and up to date information at all times. Marine Flow, or companies belonging to its group, are not liable for possible consequences of any

incorrect information provided in this document by mistake. Marine Flow reserve the right to make changes.

Note: later versions of this document replace and void older versions. The general terms and conditions of Marine Flow are applicable. In the general terms and conditions Marine Flow has

limited its liability. Current versions of this document and of the general terms and conditions of Marine Flow are available at www.marine-flow.com

General terms and conditions of installation and use Marine Flow

Marine Flow is a trade name of MIT Investments BV., The Netherlands, registered with the Chamber of Commerce under number 84229691.

These terms and conditions have been filed with the Chamber of Commerce.

Applicability and formation of agreement

1. These General terms and conditions of installation and use apply, with the exclusion of customer's terms and conditions, to the installation and use of all Marine Flow products.
2. In addition to and without prejudice to the General terms and conditions of sale and delivery, these General terms and conditions of installation and use apply to the legal relationship between Marine Flow, including third parties engaged by Marine Flow, on the one hand, and one or more customers and / or users on the other hand, in the context of the installation and use of Marine Flow products.

Use of products

3. The customer must at all times follow the instructions and directions regarding the use of Marine Flow products. Any guarantee and / or liability of Marine Flow will be null and void if the instructions and directions have not been fully followed.

Exonerations

4. Installation is entirely at the risk of the customer. Marine Flow is not liable for any damage caused during installation, unless the damage was caused by intent or deliberate recklessness on the part of Marine Flow. In no case is Marine Flow liable for consequential damage and / or indirect damage. Without prejudice to the above, the following limitations of Marine Flow's liability apply.
5. Marine Flow offers a guarantee with respect to the products if and insofar this has been agreed in writing between the parties upon conclusion of the agreement or insofar as Marine Flow is legally obliged to do so.
6. Subject to any mandatory obligations arising from the law, Marine Flow is never obliged to compensate any loss, except in the event of intent or willful recklessness.
7. Any liability for consequential loss or loss of profits, indirect loss, lost profits and loss owing to stoppage of the customer and/or the customer's customers is explicitly excluded under all circumstances. Liability is always limited to the amount insured or paid by Marine Flow. In the event of loss that is not or only partially covered, Marine Flow's liability is always limited to the invoice amount of the specific delivery or partial delivery.

Other

8. Should any provisions of these General terms and conditions of installation and use be null and void, be annulled, or be unenforceable, this will not have any consequences for the validity of all other provisions or the agreement.
9. If and insofar Marine Flow cannot invoke any provision of these General terms and conditions of installation and use or the agreement, then said provision will be construed as having a content and purport that is as much as possible in accordance with the original provision, allowing it to be invoked by Marine Flow.
10. All costs, judicial and extrajudicial, related to the collection of sums owed to Marine Flow are fully for the account of the customer.
11. The legal relationship between Marine Flow and the customer will be governed by Dutch law, under exclusion of the Vienna Sales Convention, and all disputes will be settled exclusively by the competent court in the District of Amsterdam, The Netherlands.